




Strip the cable according to the table below. Slide the crimping sleeve over the cable.

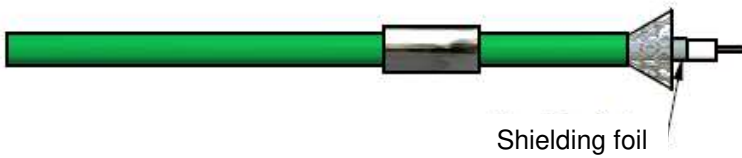

Widen the screening braid. But do not widen any existing shielding foil.

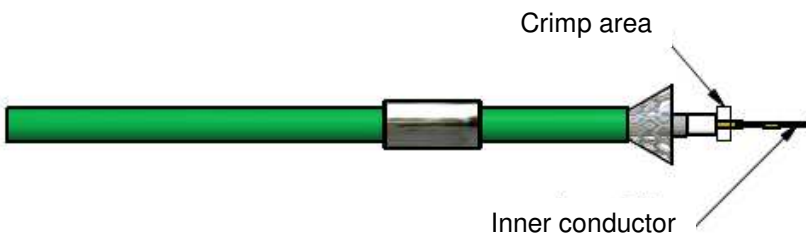

Slide the inner conductor till the insulating and crimp at the illustrated area.

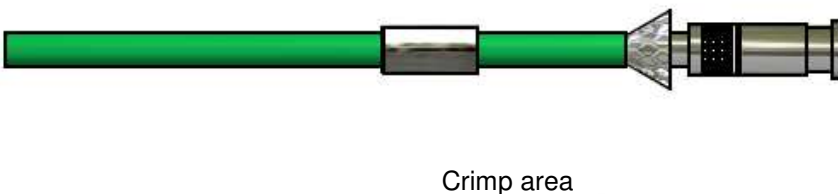

Insert the partially assembled cable into the contact body till the inner conductor can be felt to engage.



Slide the crimping sleeve carefully over the screening braid till the contact body. Crimp near to the contact body.

Part Number	Cable Group*	Reference Cable*	Crimp Plier incl. Crimp Die	Crimp Die Size	A	B	C
1-8579-13900	74	0.4/1.9 AF <i>Draka</i>	90-1345-1000	0.95/ 4.52	4	8	16
1-8539-13900	42	0.6/2.8 AF <i>Draka</i>	90-1341-1000	0.95/ 5.41	4	6.5	15
1-8577-13900	51	1.0/4.8 AF <i>Draka</i>		1.07/ 8.23	4	8	16

*see *Cable Table Coaxial Cable*

